

⚠ WARNING:

- Keep ink away from eyes. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- Adult supervision recommended.
- DO NOT apply ink directly on skin.

IMPORTANT INFORMATION

- Cover the play area before use to prevent possible damage from art supplies and ink.
- Only use art supplies on surfaces approved by a parent, like scratch paper or art paper.
- Always replace the lid on the ink pad after use to prevent ink from drying out.
- DO NOT apply ink or colored pencil on fabric surfaces. Should color transfer to fabric, rinse with a damp cloth and water to remove ink or colored pencil. Ink and pencil left on surfaces overnight may not be completely removable.
- DO NOT leave ink in the sun or in very hot areas.
- Wash hands thoroughly after playing with the ink.
- Use a pencil sharpener (not included) should the tip of the colored pencil break or become dull.
- Items in this playset are not edible.



⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

AGE 3+ YEARS
ADULT SUPERVISION RECOMMENDED
CONFORMS TO ASTM D-4236

542353

CONTENTS

- | | |
|----------------------------------|-------------------------------|
| A. 1 Num Noms™ Art Cart | E. 3 Popcorn scented Erasers |
| B. 1 Stencil Ruler | F. 1 Num Noms™ Stamp with Lid |
| C. 1 Colored Pencil | G. 1 Scented Ink Pad with Lid |
| D. 1 Cotton Candy Scented Eraser | |



Please keep this manual as it contains important information.



0316-0-E/INT

www.numnoms.com
© 2016 MGA Entertainment, Inc.
NUM NOMS™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 U.S.A.
(800) 222-4685
Printed in China

MGA Entertainment UK Ltd.
50 Presley Way
Crownhill
Milton Keynes, MK8 0ES
Bucks, UK
+ 0800 521 558

Visit
www.mga.com
to register your product
and to enter our sweepstakes
(No purchase necessary)

The preferred method of contact for
Customer Service is through our e-mail
contact form at www.mgae.com

Illustrations are for reference only. Styles may vary from actual contents.

QUICK START

IMPORTANT: Before beginning, cover the play area to prevent possible damage from art supplies.

TRACE



Remove the stencil ruler from the side of the art cart.



Use the colored pencil to fill in or trace the shapes on the stencil ruler.

ERASE



Use your cotton candy eraser on the end of the colored pencil to remove unwanted pencil marks.




Use the popcorn erasers too!

STAMP



Remove the lid under the Nom.

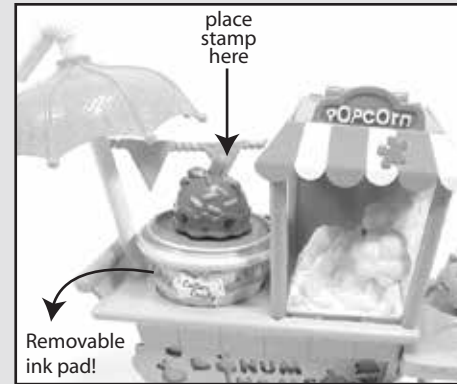

Remove the ink pad from the cart by lifting it up off of the post. Twist off the ink pad lid, and press the stamp onto the ink pad.



Use the stamp on scrap paper!

STORE



Keep your pencil and stamper on the display tray.



Store your erasers in the popcorn maker when not in use.