

10

10A

10B

10C

11

COLOR-CHANGE

- Cold color change will start at approximately 59°F (15°C), but best results occur if the ice water is chilled to approximately 32°F (0°C) or colder.
- **Only certain dolls change color.**
- Color change will only work on certain parts of the doll's body or accessories. Not all included accessories change color.
- If color change does not work properly or quickly, the temperature of the doll's body may be too close to the temperature of the water.
- Color change temperatures may vary according to weather conditions.
- Do not store the doll in direct sunlight for extended periods of time.
- Exposure to sunlight may deactivate color change feature.
- The color-change effect of the doll's body has a lengthy, but limited lifespan.

IMPORTANT INFORMATION

- Before beginning, cover the play area to protect from possible water damage.
- Wash hands thoroughly before and after use.
- Use as directed. Avoid direct skin contact with the Glitter Globe™ powder tablet and glitter mixture. **DO NOT PUT MIXTURE IN MOUTH.** Keep out of reach of small children. Adult supervision is required.
- Avoid contact with eyes. In case of eye contact, rinse with water thoroughly. If eye irritation persists, seek medical attention.
- When building SNOW B.B., logos should be facing the same side.
- Lift the assembled SNOW B.B. from the bottom ball when moving.

Dissolution of pigments may vary in different environments. Replace the plug properly and shake to achieve best result.

Your doll will spit. **Some spit and change color.** Collect them all!

Fill the bottle and feed the doll 4-6 times. Squeeze the bottle multiple times each feeding so all water flows to the doll's hair.

Doll may spit glitter during bottle feeding. Burp her between feedings by tapping the back of her head to completely fill with water.

Once hair is filled with water, water might leak from the mouth.

Do not feed or place the doll in extremely hot water (over 109.4°F/43°C).

An adult must be present when children are playing with water.

Squeeze out all water from the bottle and doll after each use.

Doll's hair glitter may change the color of the water. Do not aim at eyes, mouth or face when squeezing. Color transfer may occur.

Glitter may tint doll's hair permanently if water is left too long.

Empty all water from the doll after use.

Distilled water is recommended for filling the ball.

When filling and emptying the ball, hold it at an angle.

Max. water volume for the ball is 1.35 fl. oz. (40 ml) Do not overfill.

Do not store water in the ball for extended periods of time. Empty the ball of water and glitter after playing.

Thoroughly drain the doll and ball on a dry towel in a well-ventilated area after use and before storing.

Air dry only. Do not place in the dryer or subject to excessive heat.

Dispose of glitter [PET] in the recycle bin.

Place ball on display stand to display. Collect Winter Disco LILS™, FLUFFY PETS™ and GLITTER GLOBE™ to build SNOW B.B. Only assemble containers as instructed.

www.LOLsurprise.com

©2019 MGA Entertainment, Inc.

L.O.L. SURPRISE!™ and GLITTER GLOBE™ are trademarks of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

MGA Entertainment, Inc.

9220 Winnetka Ave.

Chatsworth, CA 91311, U.S.A.

(800) 222-4685

MGA Entertainment UK Ltd.

50 Presley Way

Crownhill

Milton Keynes, MK8 0ES

Bucks, UK

+ 0800 521 558

MGA Entertainment (Netherlands) B.V.

Klipperlaak 201, 2411 ND Bodegraven, NL

Tel.: +31 (0) 172-758 038

E-mail: klantenservice@mga.com

Imported by MGA Entertainment Australia Pty Ltd

Suite 2.02, 32 Delhi Road, Macquarie Park, NSW 2113

1300 059 676

U.S. Patent No. 9,931,579. • Patents pending in other countries

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

Printed in China

0619-1-E/INT

Read and follow the instructions before beginning.

Please keep this manual as it contains important information.

Illustrations are for reference only. Styles may vary from actual contents.

L.O.L. SURPRISE!

GLITTER GLOBE

WINTER DISCO

AGES 3+

ADULT SUPERVISION REQUIRED

WARNING:

CHOKING HAZARD-Small parts.

Not for children under 3 years.

