## L.O.L. Surprise!™ Smartwatch, Camera & Game

L.O.L. Surprise!™ Smartwatch, Camera & Game is packed with interactive games, dual P.O.V and selfie cameras, and more! You can dance with Sprints, interact with M.C. Swag, and customize Diva's fashions!



#### CONTENTS

1. L.O.L. Surprise!™ Smartwatch, Camera & Game 2. Watchband

3. Clip/Stand 4. Micro-USB Cable

Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, tags and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

# **SPECIFICATIONS**

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 <u>OR</u> Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable)
Battery Life	Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	2402MHz-2480MHz
Max. Radio Frequency Power Transmitted	-2.3dBm

#### MICRO-USB PORT (-

NOTE: An adult must charge the device and connect to a computer.

Use the included Micro-USB Cable to connect the device to your computer to transfer photos and videos and to charge the device.

1. Open the cover over the Micro-USB port on the smartwatch. 2. Insert the Micro-USB side of the cable into the port.

Insert the large USB end into a USB port on your computer.

## **BATTERY CHARGING**

Prior to use, it is recommended that you fully charge your L.O.L. Surprise!  $^{\text{\tiny{IM}}}$  Smartwatch, Camera & Game for optimal performance. **NOTE:** The device should be OFF prior to charging. To power OFF, hold the home button for

about 5 seconds, until a sound plays and the device shuts off.

1. Remove the watchband or clip/stand from around the smartwatch. 2. Insert the larger end of the Micro-USB cable into a USB port on your computer.

3. Lift open the cover over the Micro-USB port on the smartwatch and insert the Micro-USB

4. A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.

5. You can now turn on the device, add your favorite accessory and begin playing.





Open the port cover on the underside of the smartwatch and plug the Micro-USB end of the cable into the port. Plug the charging cable into the USB port on your compute

• See page 24 for more **BATTERY INFORMATION.** 

### SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

#### FIRMWARE UPDATE

Before beginning, it is important to check for any available firmware updates so that your L.O.L. Surprise!™ Smartwatch, Camera & Game is operating optimally. To update the firmware: 1. On your computer, download the latest firmware pack from mgae.com/customer-care/firmware

2. Unzip the firmware pack. 3. Turn off the smartwatch by pressing and holding the home button on the front of the device for

about 5 seconds until a sound plays and the screen turns off. 4. Follow the steps on page 4 to connect the Micro-USB Cable to the device and your computer 5. Look for the drive on your computer named LOLSurprise. A charging icon will show on the device's

touchscreen 6. Quickly tap the screen 5 times to unlock. Then, an unlock icon will appear on the device's

7. Copy all files in the firmware pack folder to the drive on your computer named LOLSurprise. 8. Choose "Replace all files in destination" when the computer prompts you to do so.

9. Properly eject the device from your computer when copying is finished. Then, remove the Micro-USB Cable. 10. Turn on the smartwatch. A firmware update screen will be displayed on the device. Press the

check mark icon on the screen to complete the firmware update. NOTE: After the device cycles back on, it is recommended you turn it off and back on again to confirm the update was successful.

#### STARTING UP THE SMARTWATCH

To turn on the L.O.L. Surprise!™ Smartwatch, Camera & Game, press and hold the home button on the front of the device for about 5 seconds until the screen turns on and a sound plays. When you first start the smartwatch, ensure the firmware is up to date, as mentioned above. Make sure the device is fully charged (see page 4). To begin, you'll be prompted to set the language, date format, time, and name of the device. For more information on how to set these features, see **SETTINGS** on pages 16-18.

#### **WAKE UP THE SMARTWATCH**


After about 25 seconds of inactivity, the touchscreen will go dark. If you're wearing the L.O.L. Surprise!™ Smartwatch, Camera & Game on your wrist, raise your arm and turn the device toward you to wake it up and light up the touchscreen. If it is in the clip/stand, lift the L.O.L. Surprise!™ Smartwatch, Camera & Game to light up the touchscreen. You can also press the home button once to wake up the device.

### WIRELESS CONNECTIVITY

Your L.O.L. Surprise!™ Smartwatch can connect to other L.O.L. Surprise!™ Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS**. Make sure wireless connectivity is toggled to the ON position (button turns green). Now, you can share photos and message with other L.O.L. Surprise!™ Smartwatch users. Users must be close by to connect over wireless connectivity For example, about 50 ft. (15m) or less unobstructed. The device must also have sufficient battery power to connect wirelessly and share photos and messages. **NOTE:** Wireless connectivity is only compatible with other L.O.L. Surprise!™ Smartwatches, and will not onnect to other types of devices. Users receiving messages must accept the message from their device before they can view it.

## **USING THE DUAL CAMERAS**

There are two cameras on the L.O.L. Surprise!™ Smartwatch, Camera & Game, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 10-11.

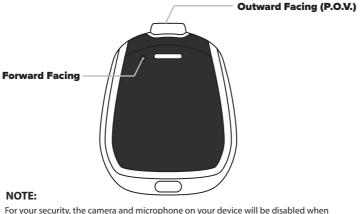

## connecting to a computer with the Micro-USB Cable, as the device must be off. Properly

eject the device from your computer, unplug the Micro-USB cable, and turn the device or before using these features.

## TRANSFERRING FILES FROM THE SMARTWATCH

To start, plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4.

On your computer, you will see a removable drive called LOLSurprise, Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in these folders to the desired location on your computer. TIP: Photo and video files will not be deleted from the smartwatch until you manually delete them on the device by pressing the trash can icon in the photo and video apps.

You cannot load photos or videos from other devices onto the L.O.L. Surprise!™ Smartwatch, Camera & Game, as the file types may not be compatible.

**NOTE:** Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

#### **WEARING THE SMARTWATCH MENU MODE**

As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

 
Avoid wearing the watchband too tightly, which may also contribute to skin irritation. The band should not be too loose so that is does not stay in place properly, but it should also not be so tight that is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with the L.O.L. Surprise!™ Smartwatch, Camera & Game.

### **USING THE CLIP/STAND**

In addition to wearing the L.O.L. Surprise!™ Smartwatch, Camera & Game on your wrist, you can use the included clip/stand to attach it to your clothing or use it as a display stand on a table. The smartwach will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband. TIP: For both the watchband and the clip/stand, make sure the device's arms and legs are


able to move in and out of the casing. Ensure a proper fit before use.



Use the lock at the top of the clip to secure the clip in the closed position. Lift the clip slightly to use as a clip-on accessory.



 Lift the lock and open the clin fully to use as a stand. Lowe the lock into place



## ite. Time. Date Format. 12 or 24 Hour Clock. anguage, Brightness, Volume, Firmware Updater, vice Name, Wireless Connectivity

Sprints Says, and Activity Tracket

**WALKIE TALKIE** 

IMAGE GALLERY

ALARM CLOCK

HOME BUTTON

M.C. SWAG MODE

**QUICK MENU VIEW** 

smartwatch is listening to you in M.C. Swag Mode.

2. Shake M.C. Swag around to make her dizzy!

5. Swipe left to make M.C. Swag annoved!

interact with and express herself!

stat bar (see **HEALTH** on page 16).

3. Leave M.C. Swag alone and watch her yawn or whistle.

6. Swipe up and M.C. Swag will listen to you! Try saving, "Hi M.C.

left, or right on her face to disable the listening mode.

Swag," or asking a question to see her response. Swipe down,

7. Press and hold M.C. Swag's face to open up fun emojis for her to

8. Sometimes M.C. Swag will suggest a game to play or an app to

M.C. Swag suggests. This will also boost her happiness on the

use with a speech bubble icon. Click on the icon to open the app

screen to open up sub-menus (indicated by an arrow next to the icon).

To exit a menu selection, press the home buttor

VIDEO CAMERA

VIDEO GALLERY

MESSAGING 99

L.O.L. Surprise!™ Time, Yeah Math!

A-Maze-Ing Balance, and Tic-Tac-Toe

4. Swipe right to tickle M.C. Swag and make her giggle.

make changes to those settings.

M.C. SWAG MODE

Press and hold the home button on the front of the smartwatch for about 5 seconds

M.C. SWAG MODE, MENU MODE and WATCH SCREEN MODE.

From M.C. SWAG MODE, press the home button to switch to MENU MODE

From MENU MODE, press the home button to switch to WATCH SCREEN MODE

From WATCH SCREEN MODE press the home button to switch to M.C. SWAG MODE

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity,

will disappear after a few seconds. Tap on the volume or wireless connectivity icons to

**NOTE:** The quick view menu will not appear by swiping down on the screen while the

1. When you touch the screen in M.C. Swag Mode, the device's arms and legs will move!

daily steps, and battery charge level. Swipe up to make this guick view menu disappear or it

Press the home button on the front of the smartwatch to rotate the display to M.C. SWAG MODE.

PLUS SO MUCH MORE! What else can your L.O.L. Surprise!™ Smartwatch, Camera & Game do?

select from a variety of games and activities which include your favorite L.O.L. Surprise!™

characters, access dual P.O.V. and selfie cameras, and send messages! Press the icons on the

There are four main menu screens, and three sub-menus for games, fitness games/tracking,

GAMES

| Time Yeah Math|
| Tracking Limit Emarch

and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.

Once the smartwatch is turned on, press the home button once to rotate the display between

**CALENDAR STOPWATCH** 

**CAMERA** 

**REMEMBER:** For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.



#### **Video Camera:** lfies or point of view (P.O.V.) videos

with your device!

• Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V. Press the circle button on the bottom of the screen to start recording, and press the square button to stop recording your video.

vou've taken on vour device

have taken on your device.

ress the large image icon in the left-hand corner to enlarge the

Use the arrow keys to select the sticker you want. Then, press

and hold the sticker and drag it around the screen to move it.

Press the dashed square icon to add a graphic border to your

image, and use the arrows to to select the border you want

Press the icon in the top left to go between the enlarged

Press the two arrows icon on the top of the screen to rotate

• Press the trash can icon to delete the video. Then, press the



CAMERA

Video Gallery:

Image Gallery:

Press the check mark to save your edited image as a new picture.

Press the stamp icon to remove the border.

ap on a video in the gallery to watch it.

video view and the gallery view.

Swine left or right to view all of your videos

ress the play button over the video to play it.

on a photo in the gallery to select it.

Press the trash can icon to delete your photo. Then, press the check to delete or the X.

ess the pencil icon to add a sticker your image.

#### Camera: ake selfies or P.O.V. photos with your device!

Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V. Press the shutter button on the bottom of the creen to take your picture.

## **GAMES MENU**

All games have three level options, where 1 is the easiest level and 3 is the hardest level. See if you can win each game playing all three levels!



## L.O.L. Surprise!™ Time:

he clock will select a random analog time.

Touch the digital numbers. Then, press the arrows above and below the digital numbers to enter the me shown on the analog clock. When you think the time you have set is correct press the check mark to submit your answer. After 5 correct answers, M.C. Swag's face will show

up with a fun animation! · A new clock time will appear, so keep playing!

. Earn stars as you enter the correct time!



If you are wearing the smartwatch on your wrist,

move your wrist around to roll the balls. If the smartwatch is in the clip/stand, rotate the device to roll the balls. Farn stars for every ball you match correctly!

Yeah Math!: Solve the math problem by selecting the correct

number on the L.O.L. Surprise!™ ball when it pops up on the screen. If you answer correctly, you'll earn a star!

• Try again if you select the wrong answer.



#### Tic-Tac-Toe: Play a game of Tic-Tac-Toe against the device.

Pick a section to place your X. Three X marks in a row wins! Three O icons in a row means the smartwatch won that round.

· Earn a star for each game you win



**REMEMBER:** Your L.O.L. Surprise!™ Smartwatch can connect to other L.O.L. Surprise!™ Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS** (making sure it is toggled to the ON [Green] position). Now, you can send messages with other nearby L.O.L. Surprise!™ Smartwatches. NOTE: Wireless connectivity is only compatible with other L.O.L. Surprise!™ Smartwatches and will not connect to other types of devices.





Messaging: nearby L.O.L. Surprise!™

Send images from your gallery or click the emoii icon in the top-left corner to send an emoji! Press the send icon in the top-right corner to send

Select the L.O.L. Surprise!™ Smartwatch you want to A graphic representing a transfer between two L.O.L. Surprise!™ Smartwatches will appear on the

screen to confirm your message is being sent · A chat bubble will pop up on the receiving L.O.L Surprise!™ Smartwatch when your message has

The receiving device must press the chat bubble

NOTE: Pictures sent to another LOL Surprisel™ Smartwatch cannot be saved on that device. They

will disappear after about 15 seconds. Walkie Talkie:

# ss the button on the top of the two-way radio to

extra fast, slow-mo, robot, hamster or no effect.

Press the play button to play your message back message to a nearby L.O.L. Surprise!™ Smartwatch send the message to A graphic representing a

will appear on the screen to confirm your message A chat bubble will pop up on the receiving L.O.L.

Surprise!™ Smartwatch when your message has sent. The receiving device must press the chat bubble to

NOTE: Messages sent to another L.O.L. Surprise!™ nartwatch cannot be saved on that device. They v disappear after about 15 seconds.

# FITNESS MENU



# For each correct object, earn stars!



10.000

MANAAI

#### Freeze Dance: Dance until the music stons!

 When the music stops and a hand is on the screen make sure to freezel Don't move while the music is stopped.

 Don't stop moving while the music is playing. Earn a star for each minute of play when you

freeze at the right time! If you are still dancing when the music stops, if you move while the music is still stopped, or if you stop moving while music plays, try again!

#### Watch the move that Sprints wants to you copy.

• Perform that move the number of times that the screen shows • The number will count down as you perform

the move repetitively.



starting new physical activities.

**Activity Tracker:** 



Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps. Press the check mark to set your goal.

**REMEMBER:** Always consult a doctor before



# **FASHION**



# **Fashion Show:**

see all of the L.O.L. Surprise!™ rooms and four different dolls! · Open the diamond icon in the top-left corner to see all the fashion items, pets,

and other items you have collected. Swipe left and right to see all of your

• Press the back arrow to go back.

· Tap an item and press the check mark to add it to the doll and room you're in. · Press and hold the item to move it around

and then press the check mark when you're happy with it. · Uncheck the icon to move the item.

• How many ways can you mix and match?

• Drag the item to the sides of the screen to





Farn a new treasure reward in the treasure



**Rewards:** See all the trophies you've earned from playing games and interacting

with M.C. Swaa. Reward Scoring:

Level up after 100 stars to earn a trophyl





Interact with M.C. Swag in M.C. Swag Mode to ncrease this stat bar

lay and win games to increase this stat bar.

Meet your step goals, walk and play fitness. ames to increase this stat bar

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.



Oate, Time, Date Format, 12 or 24 Hour Clock, Language, Brightness, Volume

If the setting is already accurate, press the check mark to continue or swipe left

To cycle through each setting, swipe left or right on the screen.



to the next screen.

#### **Date Selection:**

Make the appropriate changes. Then, press the check mark to set your selection.

Press the check mark to set your



## Time Selection:

up and down on the numbers to change the Press the check mark to set your selection.

NOTE: The smartwatch will not automatically hange for Daylight Savings Time.



#### **Date Format Selection:**

- DD/MM/YY
- o set the display



## 12 or 24 Hour Clock Selection:

Press the check mark next to your selection

- 24 Hour Cycle (for example, 6:00 p.m. would
- display as 18:00)
- Press the check mark next to your selection to set the display.



· English · Spanish · French



## **Brightness Setting**

the brightness of the screen.



### Volume Setting

the device's volume level.



## Firmware Updater, Device Name, Wireless Connectivity



## Firmware Updater:

- Camera & Game is up to date with the latest
- he screen will show you which version you
- onfirm you have the latest version

NOTE: You will also see this screen on your first



## L.O.L. Surprise!™ Smartwatch, Camera & Game Device Name:

- you can add onto the LOL prefix to customize it
- Press the X to clear the letter or number you've

NOTE: Your device name will always start with LOL. The first four characters LOL\_ cannot be

Press the X icon next to the time to select that

Press the X icon next to the timer again to make

Next, press the numbers to select that alarm.

Press the hour and minute numbers to change

· Continue changing the hour numbers to switch

• Press the icon next to AM/PM to set the alarm

sound, like a bell, a puppy barking, a rooster,

• Cycle back to the X icon to delete the alarm.

NOTE: The alarm will stay set for the next day

unless you cycle back to the X icon to clear the

t from day or month calendar views by

clicking on the calendar icon in the left-hand

Swipe left or right to cycle through the sticker

Press the check mark to add the sticker to the

Press the X icon to remove it.

• Press the stop icon to turn the alarm off.

· When your alarm goes off, M.C. Swag will appear

he numbers appear.

between AM and PM.

music, and water

Calendar:

the selection.



CALENDAR & TIMERS

## Wireless Connectivity Selection:

vireless connectivity on (green) or

# NOTE: See page 5 for more

# **CALENDAR & TIMERS (CONT.)**



## Timer:

timer by swiping up or down (or tapping) on the minutes and seconds numbers to set the desired duration of time.

- elect a preset timer by pressing the icon in the op left. By default these times are:
- Brushing Teeth: 2 Minutes
- ZZZ: 30 Minutes
- · Book: 15 Minutes • Broom: 15 Minutes
- · Sleep Mask: 2 Minutes Music: 30 Minutes
- Phone: 15 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers. Press the check to set the timer.

- Press the play button to start the timer. Press pause to pause the timer.
- · An animation of the timer you selected will appear when the timer is done.



## Stopwatch:

doing various activities and

ess the stop button to stop the stopwatch. Press the X button to reset the stopwatch.

#### TRALIBI ECLIGATINA

TROUBLESHOOTING	
The smartwatch has stopped working.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on.  NOTE: if the device still does not work, charge the battery (see page 4) and follow the steps above.
The touchscreen is not responding properly.	1. Turn the power OFF by pressing and holding the home button until the device turns off.  2. Turn the device back ON by pressing and holding the home button until the device turns on. It should now work properly.  NOTE: if the device screen still does not work, charge the battery (see page 4) and follow the steps above. TIP: Use the tip of your finger rather than your finger nail for best results using the touchscreen.
The image or video taken is not clear.	Ensure the lighting in the area you are shooting is sufficient.     Check that the camera lens is clean. If dirty, wipe with a dry, soft cloth and blow on it to remove debris. See CARE AND MAINTENANCE on page 23.
Cannot connect the device to a computer.	Ensure there is a good connection between the device and the computer via the Micro-USB Cable. See MICRO-USB PORT on page 4 and other supporting sections for more information.      If the cable is damaged, contact consumer service.

# Do not attempt to use the cable if it is damaged. 1 Stay within close proximity (about 50 ft /15m with Wirele

connectivity is	nothing in the way) of other L.O.L. Surprise!™
	Smartwatches when connecting wirelessly.  2. The device must have a sufficient amount of
p. 2 p. 2. 1,1	battery power to connect wirelessly. Recharge t

- . Only use the included Micro-USB cable to charge The device is not the device. charging. 2. It is recommended you only charge the device
  - in a long time may no longer accept a charge.

#### using a USB port on your computer. . Make sure to charge the device regularly, even if it is not in use. A battery that has not been charged

## **LiPo BATTERY SAFE USAGE**

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use. • Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- · Do not strike or throw the battery against hard surfaces
- Do not immerse the battery in water
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.

Keep the battery in a cool, dry place

- Do not directly solder the battery and pierce the battery with a nail or other sharp object. • Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a
- battery that will no longer accept a charge. • Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

## **BATTERY LIFE AND MAINTENANCE**

Check the battery charge level on the guick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

SAGE	BATTERY LIFE
sage	5 Days
ıl Usage	2 Days
Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn't regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period.

This chart is only an estimate of the projected battery life before charging is needed.

#### **FCC COMPLIANCE**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver
- Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Caution: Modifications not authorized by the manufacturer may void users authority to This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation

Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference, 2. This device must accept any interference, including interference that may cause undesired operation of the CAN ICES-3 (B)/NMB-3(B).

## LIMITED WARRANTY

This warranty is applicable only to the original purchaser, is non-transferabe and applies only to MGA Entertainment, Inc. products or parts. This product is covered by a 6-month warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This warranty does not apply to:

- Consumable parts, such as batteries
- Cosmetic damage, including but not limited to scratches and dents Damage caused by use with non-MGA Entertainment, Inc. products
- Damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes
- Damage caused by operating this product outside the permitted or intended uses described by MGA Entertainment, Inc. in this manual
- A product or part that has been modified Defects caused by normal wear and tear or otherwise due to the normal aging of the product
- If any MGA Entertainment, Inc. serial number has been removed or defaced





571391, 571391E5C, 575238

**USER GUIDE** 

SMARTWATCH.

CAMERA & GAM

# littletikes.co.uk, and/or call +0800 521 558 or write to 50 Presley Way, Crownhill, Milton Keynes MK8

2113. Some replacement parts may be available for purchase after the warranty expires – contact us

littletikes.nl, and/or call +31(0) 172 758038 or write to klantenservice@mgae.com. Some replacement parts may be available for purchase after the warranty expires – contact us for details. Outside of these countries: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or

If MGA Entertainment, Inc. believes that there may a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining warranty of the original product or 30 days from the date of replacement

FROM THIS WARRANTY SHALL BE SUBJECT TO THE FINAL AND CONCLUSIVE DETERMINATION OF MGA ENTERTAINMENT, INC.

DATED SALES RECEIPT REQUIRED FOR PROOF OF PURCHASE

## For more information including the latest instructions, visit: WWW.MGAE.COM

#### Please keep this manual as it contains important information.



©2020 MGA Entertainment, Inc. .L. SURPRISE!™ is a trademark of MGA in the U.S. and other countries.

appearance are the property of MGA.

PRINTED IN CHINA

in the United States and other countries Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

All logos, names, characters, likenesses, images, slogans, and packaging

Microsoft® and Windows logos are trademarks of Microsoft Corporation

U.S. Consumer Service 2180 Barlow Road Hudson Ohio 44236 U.S.A. 1-800-321-0183

MGA Entertainment IIK Ltd 50 Presley Way, Crownhill, MK8 0ES, Bucks, UK

Alphen a/d Rijn, The Netherlands Tel: +31 (0) 172 758038 E-mail: klantenservice@mgae.com Australia Pty Ltd.

Baronie 68-70, 2404 XG

MGA Entertainment (Netherlands) B.V



# Language Selection

Press the check mark to select your lanugage.



# JANUARY 2020











# WEDNESDAY

# start up after updating the firmware.

- Should you choose a new name, press the up and down arrows to select a letter or number. Press the letter or number to set it.
- · Press the check mark to save your new device

# se the togale button to turn

ess the play button to start the stopwatc

#### **WATCH SCREEN MODE** Press the home button to rotate the display to WATCH SCREEN MODE.

Swipe left or right on the touchscreen smartwatch surface to select from over 50 watch faces. Stop swiping to set the watch face that you like. Alarm Clock:













#### This toy produces flashes that may trigger epilepsy in sensitized individuals. A very small percentage of people, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain light patterns or flashing lights. While this product does not contribute any additional risks, it is recommended that parental supervision is enforced during play. If you experience any dizziness or altered vision, disorientation or convulsions, IMMEDIATELY discontinue use

and consult a physician. Focus on screens in close proximity for an extended amount of

time may cause fatigue or discomfort. For every one hour of play, take a 15 minute break,

## **CARE AND MAINTENANCE**

or take breaks more frequently as needed.

**↑** WARNING

- Always keep the port cover closed during use to prevent water or debris from entering the device. Only open the port cover to connect the device to your computer. Keep the device clean by wiping it off with a slightly damp cloth and drying it thoroughly. Do not place the device under running water or use harsh chemicals or abrasive materials
- Remove the device from the watchband and clip/stand to clean. Wine the accessories with a damp cloth regularly to keep them clean. Always air dry; do not subject to heat. • Keep the device and accessories out of direct sunlight for long periods of time. Do not expose the device or accessories to direct heat sources.

• Keep the camera lens clean. If pictures are blurry, it could be because dust or dirt is

accepts a charge. See BATTERY LIFE AND MAINTENANCE on page 24.

covering the camera lens. Wipe clean with a dry, soft cloth and/or blow gently on the lens to remove any debris. • If you do not plan to use the device for an extended period, it is recommended that you turn the device off. Regularly charge the battery when not in use to ensure the battery

## **SPLASHPROOF**

2. Do not place the device under running water.

**RESTARTING THE WATCH** 

While your device can withstand splashes from washing your hands or dancing in the rain, it is not recommended to submerge the device in water.

To prevent water damage: 1. Always ensure the cover over the Micro-USB port is completely closed to prevent water from getting inside the smartwatch.

Do not drop the device on a hard surface to prevent damage

If your device is unresponsive or if you wish to reset the watch to the way it was upon unboxing, press and hold the home button for 8 seconds to reset the watch. NOTE: You may need to reset all custom settings.

3. Do not submerge in water or wear while showering, bathing or swimming.

 
#### **BATTERY DISPOSAL** 'Let's care for the environment!

BATTERY REMOVAL INSTRUCTIONS

#### The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or


recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

# void the warranty. Battery removal is permanent, and the device will no longer work after




This toy contains a battery that is non-replaceable. Do not attempt to open the device unles

you are permanently disposing the device. Opening the device for any other reason could

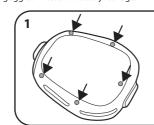

 
Use a small Phillip's screwdriver (not included) to remove the five screws on the back of the device.



# Remove the middle panel to reveal the battery.



 Remove the device's arms and legs. Then, use a small Phillip's screwdriver to remove the five remaining screws on the middle nanel



Lift out the battery. Use scissors to carefully cut the black with electrical tape and properly dispose of the battery.

## LIMITED WARRANTY CONT. or assistance, please contact consumer service

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. **United Kingdom:** For warranty service or replacement part information, please visit our website at:

OES, Bucks UK. Some replacement parts may be available for purchase after the warranty expires contact us for details. Australia: For warranty service or replacement part information, please visit our website at: littletikes.com.au and/or call 1 300 059 676 or write to Suite 2.02, 32 Delhi Road. Macquarie Park NSW

**Benelux Region:** For warranty service or replacement part information, please visit our website at:

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under warranty. Return of the product under warranty must adhere to the following rule:

consequential damages, so the above limitation or exclusion may not apply to you.

whichever provides longer coverage. THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF MGA ENTERTAINMENT, INC. CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW. ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY MGA ENTERTAINMENT, INC. IN ITS SOLE DISCRETION, ANY DISPUTES RESULTING

To the extent permitted by law, MGA Entertainment, Inc. will not be responsible for direct, special, incidental or consequential damages resulting from any breach of warranty.



mported by MGA Entertainmen Suite 2.02, 32 Delhi Road Macquarie Park NSW 2113



