FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user's authority to operate this device. CAN ICES-3 (B)/NMB-3(B).

/'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Lilly#Tikes

Make Me Better Mitts"





Includes:

- a. 1 Plush Dog Make Me Better Mitts™
- b. 1 Stethoscope
- c. 1 Shot
- d. 1 Cast




Illustrations are for reference only. Styles may vary from actual contents.

BEFORE YOU BEGIN

The batteries included in your dog are for in-store demonstration. It is recommended that, prior to playing, an adult install fresh batteries for best performance. Here's how:

- 1. Pull apart the opening on the dog's tummy to reveal the battery compartment.
- 2. Using a Phillips screwdriver (not included), remove the screw from the battery compartment cover under the dog.
- 3. Install (3) three 1.5V AAA (LR03) batteries making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- 4. Replace the battery compartment cover and tighten the screw.
- 5. Move the switch from TRY ME to the ON position.
- 6. Close the opening on the pet's tummy.

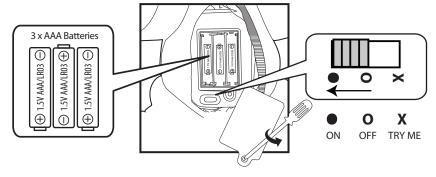

Join the fun at www.lillytikes.com

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China • 0420-0-E/INT

www.littletikes.com
www.littletikes.co.uk
www.littletikes.comau

Little Tikes Consumer Service 2180 Barlow Road Hudson, Ohio 44236 U.S.A. 1-800-321-0183

MGA Entertainment UK Ltd. 50 Presley Way, Crownhill, Miltor Keynes, MK8 0ES, Bucks, UK 0800 521 558 MGA Entertainment (Netherlands) B.V. Baronie 68-70, 2404XG Alphen a/d Rijn, The Netherlands Tel: +31 (0) 172 758038

E-mail: klantenservice@mgae.com

Imported by MGA Entertainment Australia Pty Ltd Suite 2.02, 32 Delhi Road Macquarie Park NSW 2113

1300 059 676

Δ

LET'S PLAY

REMEMBER: Move the switch from TRY ME (X) to ON (●) before playing as shown on page 1.



Pet the top of the dog's head firmly, and the dog will greet you!



Press the stethoscope under your dog's heart-shaped tag. You'll hear the dog's heart beating!



To give it a shot, press the end of the shot on the spot on it's back. The dog will bark when you hit the right spot.



If you squeeze the dog's left front paw, it will glow and the dog will whimper. Place the cast over the paw to make your dog feel better. **NOTE:** The dog will stop whimpering if you place the cast over the paw **OR**

squeeze both sides of the paw at the same time.

TROUBLESHOOTING AND TIPS

- 1. If the dog's voice becomes weak or low, replace the unit with fresh batteries.
- 2. When not playing with your dog, turn the switch on the battery compartment to the "OFF" position to save battery power.
- 3. When not in use for an extended time, remove batteries to prevent possible leakage and damage to the unit
- 4. If the pet is exposed to an electrostatic environment (static electricity), it may malfunction. If this happens, replace the batteries to reset the pet.

SAFETY INSTRUCTIONS

MWARNING

- Do not sit, stand on, throw or kick the dog to prevent possible damage.
- Do not spill food and/or beverages on the dog. If an accidental spill happens, see CLEANING INSTRUCTIONS below.
- Do not expose your dog to moisture of any kind, and keep water away from the battery compartment.

CLEANING INSTRUCTIONS

To clean your dog, brush it with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove any stains.

- Do not put the dog into the washing machine.
- Do not use detergent or stain removers on the plush covering of the dog.
- Do not submerge the dog in water.
- Do not put the dog into a dryer or subject it to heat of any kind.
- Wipe dirt off immediately to prevent stains.
- If the dog gets wet, remove the batteries immediately and let the battery compartment air dry thoroughly.
- Once the dog is dry, replace the batteries.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only size "AAA" (LR03) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.