

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and –).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.
CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0419-0-E/INT
Printed In China

© Zapf Creation AG
Baby Annabell® is an internationally registered trademark of
Zapf Creation AG.
Manufactured and distributed under license by MGA
Entertainment, Inc.

The preferred method of contact for
Customer Service is through our e-mail
contact form at www.mgae.com

MGA Entertainment, Inc.
16300 Roscoe Blvd. Van Nuys, CA 91406 U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes,
MK8 0ES, Bucks, UK
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.
Klipperaak 201, 2411 ND Bodegraven, NL
Tel.: +31 (0) 172-758 038
E-mail: klantenservice@mgae.com

Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



SKUs: 916236 / 916922 / 916939

AGES 3+
ADULT SUPERVISION REQUIRED
ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

- A. 1 Doll
- B. 1 Outfit
- C. 1 Hat
- D. 1 Pacifier
- E. 1 Bib
- F. 1 Bottle with Cap
- G. Pendant Necklace (for doll)
- H. 1 Diaper




Illustrations are for reference only. Styles may vary from actual contents.

BEFORE YOU BEGIN

Before playing, an adult must install fresh alkaline batteries. Here's how:

1. Open the hook and loop fastener on the back of the doll to expose the battery compartment.
2. Using a Phillips screwdriver (not included) remove the screws and battery compartment cover.
3. Install three (3) fresh AA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screws.
5. Slide the switch to the ON position.
6. Close the hook and loop fastener.

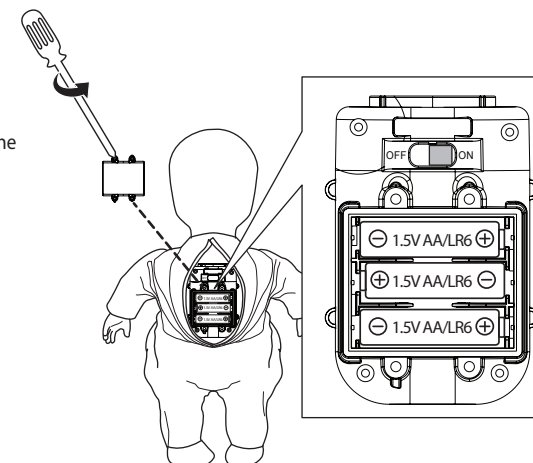

QUICK START

Baby Annabell® is just like a real baby! She babbles, laughs, drinks from her bottle and sucks on her pacifier, makes facial movements and cries real tears!

Before you begin:

- Make sure the switch on the back of the doll is in the ON position.
- Put the diaper on Baby Annabell®.

Bottle (Fig. 1)

- Remove the cap and nozzle from the bottle and fill it with water. Then, replace the nozzle.
- Insert the nozzle fully into the doll's mouth.
- After drinking, Baby Annabell® "burps" when you pat her back! If you do not pat her back, she cries for awhile and will not burp. After she cries five times, she automatically goes back to babbling.

IMPORTANT: The doll cannot suck water. The water needs to be fed by fully inserting the bottle into her mouth. Repeatedly squeeze and release the bottle to help her drink. This also fills the internal system gradually to prevent water from running from the doll's mouth.

Pacifier (Fig. 2)

- Baby Annabell® sucks on her pacifier with realistic mouth movements and sucking sounds. She also opens and closes her eyes. If you remove the pacifier, she goes back to babbling.
- After giving her the pacifier three times, she cries. To calm her down, pat her back, stroke her cheek, or give her the pacifier again.

Crying, Soothing and Sleeping (Fig. 3)

- Stroke the doll's cheek in an upward motion, and she will laugh or sigh.
- While she is upright, she will sigh when you pat her back!
- To make her sleep, make sure she is lying completely horizontally.
- Baby Annabell® cries real tears!
- Rock her in your arms, and she will sigh and yawn or cry once. If she cries, calm her by stroking her cheek. Then, she will sleep immediately.
- Stroke her cheek while she sleeps and she will sigh and go back to sleep.
- Wake her up by lifting her into the upright position. She will laugh or cry. If she cries, pat her back or stroke her cheek in the lying position.
- You can also wake her by giving her the pacifier, and she will cry. To calm her, lift her into the upright position and gently pat her back, or stroke her cheek while she is lying down.

Going Potty (Fig. 4)

- Feed Baby Annabell® water from the bottle. With the diaper on, press the heart on her belly. She will go potty!
 - Always empty the internal system of water after playing and dry the doll thoroughly. Ensure no water is left in the doll before storing.
- NOTE: Dry out the diaper thoroughly before reusing.

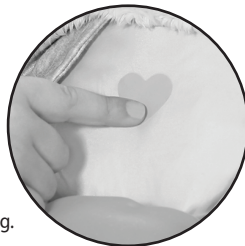


Fig. 4



Fig. 1



Fig. 2



Fig. 3

Sleep Mode:

After a few minutes of inactivity, Baby Annabell® will fall asleep, and the speech and movement mechanism will switch off. When you give her the bottle or pacifier, she will wake up and make sounds again.

The doll can also be activated by moving the switch OFF and back ON again.

TROUBLESHOOTING AND HELPFUL HINTS

Doll does not react as described.	Check that batteries are in the unit and inserted correctly according to the diagram inside the battery compartment. Insert fresh batteries if problems persist.
Doll functions stop working.	Turn OFF the doll. Remove the batteries, reinsert them, and move the switch back to the ON position.
Doll does not make sucking sounds with her bottle.	Push the bottle a little farther into the doll's mouth.
Doll does not suck on her pacifier or make sucking sounds.	Push the pacifier a little farther into the doll's mouth.
Doll does not suck on the bottle, water runs out of her mouth, or there are no smacking sounds.	The bottle must be pressed correctly into the doll's mouth, and at the same time, the bottle must be squeezed gently so that water can run into the doll's internal system. The doll cannot suck water. The water needs to be fed by fully inserting the bottle into her mouth. Repeatedly squeeze and release the bottle to help her drink. This also fills the internal system gradually to prevent water from running from the doll's mouth.
Water runs out of the doll's mouth.	The bottle is not inserted far enough into the doll's mouth or the doll has had enough to drink, and her tear function is now ready.
Doll does not cry.	The bottle is not inserted far enough into the doll's mouth. This means the internal system does not have enough water to ensure proper tear function. The doll's tear function works best when she has consumed as little as 1/4 of the water from the bottle. The included bottle is the only one that can activate the tear function.
Doll has been fed with juice or tea by mistake.	Only use clean water. Feed the doll clean, clear water until she has cried for awhile and her tears run clear again.

CLEANING INFORMATION

Clean head, arms, legs and body fabric with a damp cloth. Hand wash doll's outfit if necessary. Do not bathe the doll or wash her in the washing machine.

IMPORTANT INFORMATION

⚠ WARNING: Not suitable for children under 36 months. Contains parts which could be turned into dangerous loops. Strangulation hazard. The included accessories are only suitable for the doll.

- Read the instructions carefully and keep them for future reference.
- Constant, competent adult supervision is required when children are playing with water.
- Only use included accessories with the doll, as other accessories may not be compatible with Baby Annabell®.
- Included accessories are toys and are not for use with real babies.
- Always turn the doll OFF after use to preserve battery life. If storing for an extended amount of time, remove the batteries to prevent battery damage or damage to the unit.
- Keep moisture away from the battery compartment. If water enters the battery compartment, dry with a cloth.
- Completely empty the doll and bottle of water after use and air dry thoroughly before storing.